


READ CAREFULLY BEFORE INSTALLING

LI'L MISTER NOZZLE REPLACEMENT (Plastic Line Model)

1. Remove the nozzle to be replaced. To do this loosen the knurled nut (1) until it is free to slide the nozzle guard (2). Disengage the nozzle body (3) from the plastic line (4) with a twisting/pulling motion. Catch the inner line (5) and hold it while freeing the old nozzle completely. Discard the old nozzle.

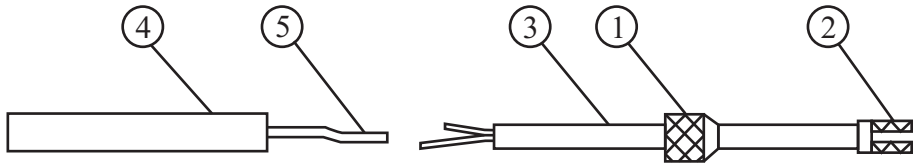


2. Insert the small diameter inner plastic tube on the LONGER of the two brass tubes protruding from the end of the nozzle body. Bring the outer plastic tube (4) over the nozzle body (3). Slide the knurled nut to the plastic outer tube and tighten it snugly. Your nozzle is now ready for use.

READ CAREFULLY BEFORE INSTALLING

LI'L MISTER NOZZLE REPLACEMENT (Plastic Line Model)

1. Remove the nozzle to be replaced. To do this loosen the knurled nut (1) until it is free to slide the nozzle guard (2). Disengage the nozzle body (3) from the plastic line (4) with a twisting/pulling motion. Catch the inner line (5) and hold it while freeing the old nozzle completely. Discard the old nozzle.

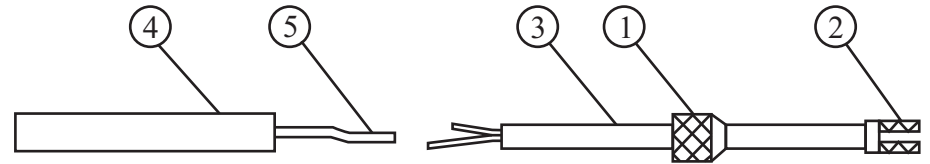

2. Insert the small diameter inner plastic tube on the LONGER of the two brass tubes protruding from the end of the nozzle body. Bring the outer plastic tube (4) over the nozzle body (3). Slide the knurled nut to the plastic outer tube and tighten it snugly. Your nozzle is now ready for use.