
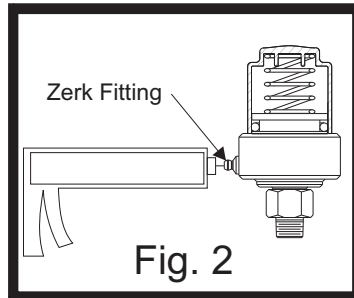


TRICO GL-P Grease Cup

Read Instructions Before Installing

To Install:

1. Refer to "Spring Selection" chart to determine correct spring to use with the GL-P (see chart below). Medium spring is already installed.
2. To install spring, turn the reservoir of the GL-P counterclockwise to unscrew.
3. Set grease lubricator base aside.
4. Place spring inside reservoir (Fig. 1).
5. Engage threads on the reservoir and base of the GL-P.
6. Turn grease lubricator reservoir clockwise to tighten.
7. Hand tighten GL-P onto equipment to be lubricated. Grease lubricator can be mounted in any direction (see reverse side on mounting).
8. Tighten GL-P with open end wrench until one turn from bottoming the hex against the equipment wall.
9. Connect grease gun to zerk fitting (Fig. 2).
10. Fill GL-P. Piston should not go above line marked on label of reservoir. DO NOT overfill GL-P.


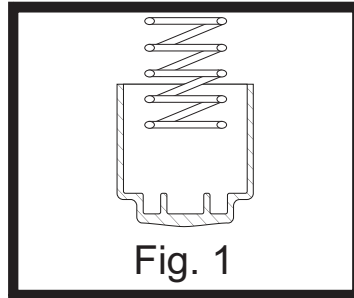


Spring Selection:

Operating Temperature	No. 0 Grease	No. 1 Grease	No. 2 Grease	No. 3 Grease
-10°F to 40°F	Silver (Heavy)	Silver (Heavy)	Silver (Heavy)	—
40°F to 110°F	Blue (Medium)	Blue (Medium)	Blue (Medium)	Silver (Heavy)
110°F to 200°F	—	Blue (Medium)	Blue (Medium)	Blue (Medium)
200°F to 250°F	—	—	Red (Light)	Red (Light)

TRICO GL-P Grease Cup

Mounting:

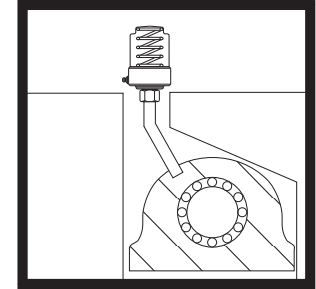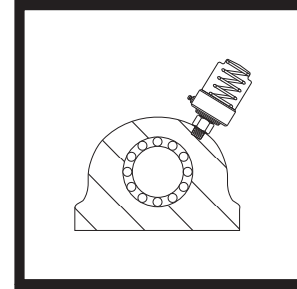

Product Ordering:

Description	Catalog #
GL-P with 1/8" NPT	33301
GL-P with 1/4" NPT	33302
GL-P with 3/8" NPT	33303
GL-P with 1/2" NPT	33304

Replacement Parts:

Description	Catalog #
Light Spring - Red	12907
Medium Spring - Blue	12908
Heavy Spring - Silver	12923
1/2"NPT Female x 1/8"NPT Male Adapter	12915R
1/2"NPT Female x 1/4"NPT Male Adapter	12916R
1/2"NPT Female x 3/8"NPT Male Adapter	12917R
1/2"NPT Female x 1/2"NPT Male Adapter	12918R

For information or technical assistance on the GL-P or any other Trico products please call our toll free number at 800-558-7008 (U.S. only) or call 262-691-9336 and ask for Customer Service.



See Reverse Side For Specific Instructions On Installing The GL-P.

TRICO GL-P Grease Cup

Read Instructions Before Installing

To Install:

1. Refer to "Spring Selection" chart to determine correct spring to use with the GL-P (see chart below). Medium spring is already installed.
2. To install spring, turn the reservoir of the GL-P counterclockwise to unscrew.
3. Set grease lubricator base aside.
4. Place spring inside reservoir (Fig. 1).
5. Engage threads on the reservoir and base of the GL-P.
6. Turn grease lubricator reservoir clockwise to tighten.
7. Hand tighten GL-P onto equipment to be lubricated. Grease lubricator can be mounted in any direction (see reverse side on mounting).
8. Tighten GL-P with open end wrench until one turn from bottoming the hex against the equipment wall.
9. Connect grease gun to zerk fitting (Fig. 2).
10. Fill GL-P. Piston should not go above line marked on label of reservoir. DO NOT overfill GL-P.

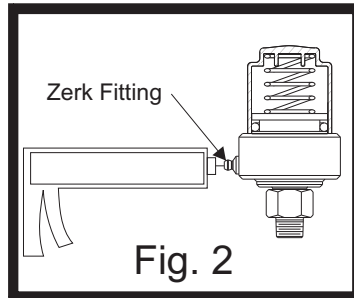
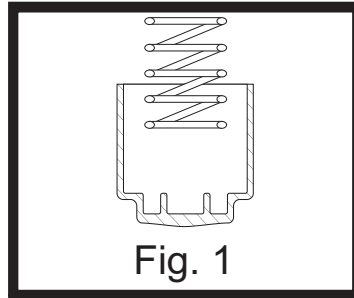


Spring Selection:

Operating Temperature	No. 0 Grease	No. 1 Grease	No. 2 Grease	No. 3 Grease
-10°F to 40°F	Silver (Heavy)	Silver (Heavy)	Silver (Heavy)	—
40°F to 110°F	Blue (Medium)	Blue (Medium)	Blue (Medium)	Silver (Heavy)
110°F to 200°F	—	Blue (Medium)	Blue (Medium)	Blue (Medium)
200°F to 250°F	—	—	Red (Light)	Red (Light)

TRICO GL-P Grease Cup

Mounting:

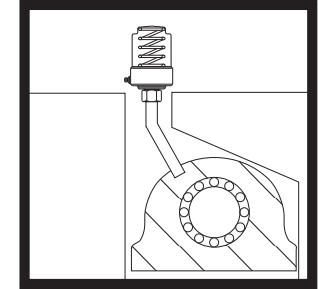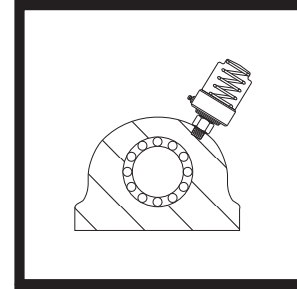

Product Ordering:

Description	Catalog #
GL-P with 1/8" NPT	33301
GL-P with 1/4" NPT	33302
GL-P with 3/8" NPT	33303
GL-P with 1/2" NPT	33304

Replacement Parts:

Description	Catalog #
Light Spring - Red	12907
Medium Spring - Blue	12908
Heavy Spring - Silver	12923
1/2"NPT Female x 1/8"NPT Male Adapter	12915R
1/2"NPT Female x 1/4"NPT Male Adapter	12916R
1/2"NPT Female x 3/8"NPT Male Adapter	12917R
1/2"NPT Female x 1/2"NPT Male Adapter	12918R

For information or technical assistance on the GL-P or any other Trico products please call our toll free number at 800-558-7008 (U.S. only) or call 262-691-9336 and ask for Customer Service.

See Reverse Side For Specific Instructions On Installing The GL-P.