
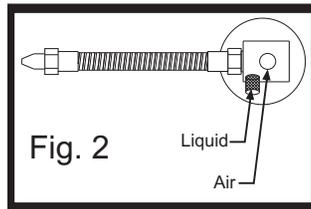


TRICO DL Magnum

Read Instructions Before Installing

To Install:

1. Connect clean, dry shop air to the 1/4" NPT inlet port on the DL Magnum. Air supply should be between 60 psi - 120 psi.
2. Using the 60# magnet, position the DL Magnum in a convenient location on the equipment.
3. Position nozzle one to two inches from tool and workpiece (Fig. 1).
4. Drop liquid pickup tube in a container filled with Tri-Cool or similar coolant suitable for mist cooling. Do not spray products containing petroleum or solvents.
5. Adjust black air needle to desired setting (Fig. 2).
6. Adjust brass liquid needle to desired setting (Fig. 2).


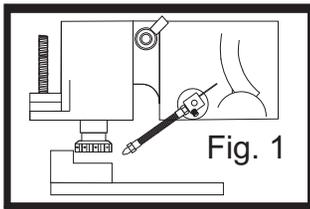


TRICO DL Magnum

Read Instructions Before Installing

To Install:


1. Connect clean, dry shop air to the 1/4" NPT inlet port on the DL Magnum. Air supply should be between 60 psi - 120 psi.
2. Using the 60# magnet, position the DL Magnum in a convenient location on the equipment.
3. Position nozzle one to two inches from tool and workpiece (Fig. 1).
4. Drop liquid pickup tube in a container filled with Tri-Cool or similar coolant suitable for mist cooling. Do not spray products containing petroleum or solvents.
5. Adjust black air needle to desired setting (Fig. 2).
6. Adjust brass liquid needle to desired setting (Fig. 2).

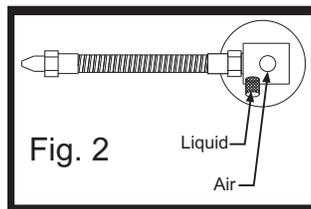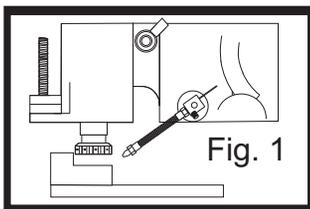

TRICO DL Magnum

Replacement Parts:

NO.	Description	Part No.
1	Nozzle Tip	10511R
2	Nozzle Conduit	10510R
3	1/4" NPT Manifold	10509R
3	1/4" BSPT Manifold	10520R
4	Liquid Needle with o-ring	21902
5	Air Needle with o-ring	21901
6	60# Magnet	12065R
7	Liquid Check Valve	10512R
8	Liquid Pickup Filter	21443R

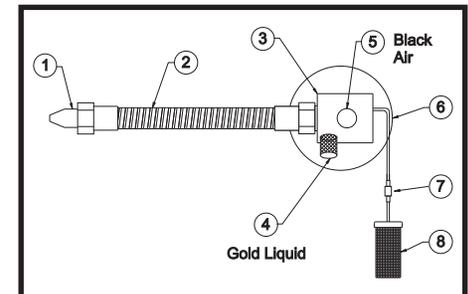

For information or technical assistance on the DL Magnum or any other Trico products please call our toll free number at 800.558.7008 (U.S. only) or call 262.691.9336 and ask for Customer Service.

See Reverse Side For Specific Instructions On Installing DL Magnum


TRICO CORP. 1235 HICKORY STREET, PEWAUKEE, WI 53072 TEL. (262) 691.9336 FAX (262) 691.2576
www.tricocorp.com

61414 11/10

TRICO DL Magnum

Replacement Parts:

NO.	Description	Part No.
1	Nozzle Tip	10511R
2	Nozzle Conduit	10510R
3	1/4" NPT Manifold	10509R
3	1/4" BSPT Manifold	10520R
4	Liquid Needle with o-ring	21902
5	Air Needle with o-ring	21901
6	60# Magnet	12065R
7	Liquid Check Valve	10512R
8	Liquid Pickup Filter	21443R

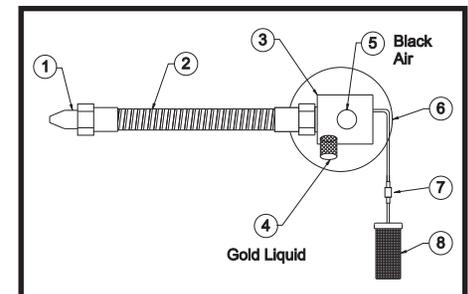

For information or technical assistance on the DL Magnum or any other Trico products please call our toll free number at 800.558.7008 (U.S. only) or call 262.691.9336 and ask for Customer Service.

See Reverse Side For Specific Instructions On Installing DL Magnum

TRICO CORP. 1235 HICKORY STREET, PEWAUKEE, WI 53072 TEL. (262) 691.9336 FAX (262) 691.2576
www.tricocorp.com



61414 11/10

TRICO DL Magnum

Read Instructions Before Installing

To Install:

1. Connect clean, dry shop air to the 1/4" NPT inlet port on the DL Magnum. Air supply should be between 60 psi - 120 psi.
2. Using the 60# magnet, position the DL Magnum in a convenient location on the equipment.
3. Position nozzle one to two inches from tool and workpiece (Fig. 1).
4. Drop liquid pickup tube in a container filled with Tri-Cool or similar coolant suitable for mist cooling. Do not spray products containing petroleum or solvents.
5. Adjust black air needle to desired setting (Fig. 2).
6. Adjust brass liquid needle to desired setting (Fig. 2).

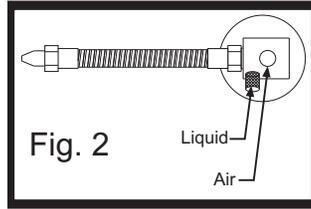
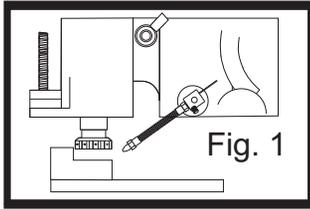


TRICO DL Magnum

Read Instructions Before Installing

To Install:


1. Connect clean, dry shop air to the 1/4" NPT inlet port on the DL Magnum. Air supply should be between 60 psi - 120 psi.
2. Using the 60# magnet, position the DL Magnum in a convenient location on the equipment.
3. Position nozzle one to two inches from tool and workpiece (Fig. 1).
4. Drop liquid pickup tube in a container filled with Tri-Cool or similar coolant suitable for mist cooling. Do not spray products containing petroleum or solvents.
5. Adjust black air needle to desired setting (Fig. 2).
6. Adjust brass liquid needle to desired setting (Fig. 2).

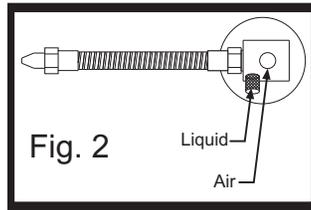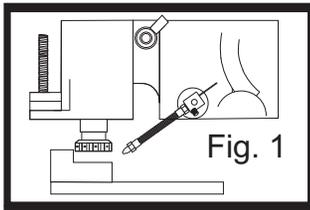

TRICO DL Magnum

Replacement Parts:

NO.	Description	Part No.
1	Nozzle Tip	10511R
2	Nozzle Conduit	10510R
3	1/4" NPT Manifold	10509R
3	1/4" BSPT Manifold	10520R
4	Liquid Needle with o-ring	21902
5	Air Needle with o-ring	21901
6	60# Magnet	12065R
7	Liquid Check Valve	10512R
8	Liquid Pickup Filter	21443R

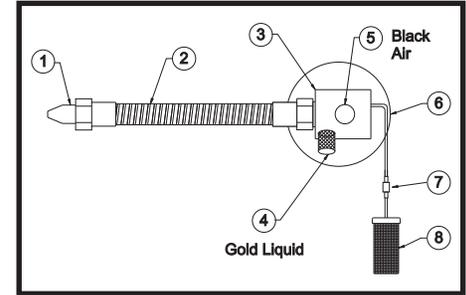

For information or technical assistance on the DL Magnum or any other Trico products please call our toll free number at 800.558.7008 (U.S. only) or call 262.691.9336 and ask for Customer Service.

See Reverse Side For Specific Instructions On Installing DL Magnum


TRICO CORP. 1235 HICKORY STREET, PEWAUKEE, WI 53072 TEL. (262) 691.9336 FAX (262) 691.2576
www.tricocorp.com

61414 11/10

TRICO DL Magnum

Replacement Parts:

NO.	Description	Part No.
1	Nozzle Tip	10511R
2	Nozzle Conduit	10510R
3	1/4" NPT Manifold	10509R
3	1/4" BSPT Manifold	10520R
4	Liquid Needle with o-ring	21902
5	Air Needle with o-ring	21901
6	60# Magnet	12065R
7	Liquid Check Valve	10512R
8	Liquid Pickup Filter	21443R

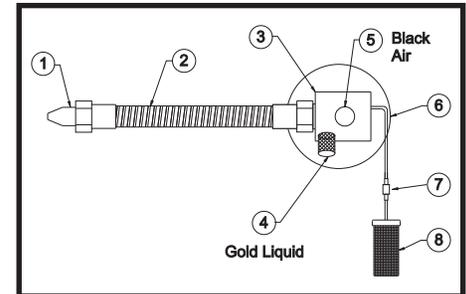

For information or technical assistance on the DL Magnum or any other Trico products please call our toll free number at 800.558.7008 (U.S. only) or call 262.691.9336 and ask for Customer Service.

See Reverse Side For Specific Instructions On Installing DL Magnum

TRICO CORP. 1235 HICKORY STREET, PEWAUKEE, WI 53072 TEL. (262) 691.9336 FAX (262) 691.2576
www.tricocorp.com

61414 11/10